
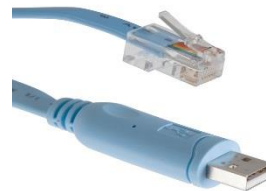


Introduction to Network Security Lab additional setup/troubleshooting

Observe the status of the 1756-L7 controller in the chassis

If the module is scrolling an error for the Stratix 5700 which reads **16#0009** and/or **16#0004** the following steps will need to be performed:

1. Connect to the console port of the Stratix switch with a console cable

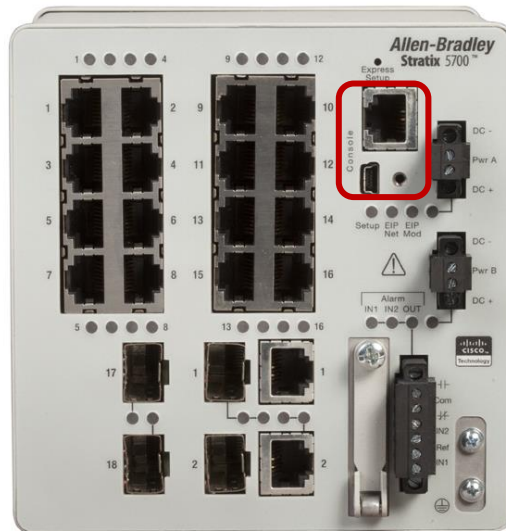

2. Issue the following commands in order:

- `enable`
 - *The enable password is rockwell, if prompted for a username this is also rockwell*
- `configure terminal`
- `cip security password rockwell`
- `do write memory`